



2 DIAL TAP TIMER



CO1602 N10372 CE
INSTRUCTION MANUAL

Glossary

1. Universal Tap Adaptor
2. Tap Connection
3. Union Nut
4. Control Dials



5. Battery Compartment
6. Clear Cover
7. Snap-on Hose Connection

Introduction

CO1602 - 2 Dial Tap Timer

Thank you for purchasing this device, please read the operating instructions carefully to familiarise yourself with the features and modes of operation before using the 2 Dial Tap Timer.

Battery Installation

- Hold the tap timer with the battery compartment facing you.
- Remove the battery compartment cover.
- Insert 2 x AA batteries into the battery compartment.
- Screw the battery cover back on.



Tap Timer Installation

Make sure the washer is in place, then screw the tap timer to tap. Turn it clockwise (hand tighten only.)

NOTE: There should be no need to use thread seal tape, as long as the tap seals onto the washer.

NOTE: When changing a battery the timer will hold programme if you fit the new battery within 2 minutes.


NOTE: When changing the battery, make sure the battery compartment stays dry.

USE ONLY AA ALKALINE BATTERIES.


Simple 2 Step Programming

- 1.) SET WATERING INTERVAL
- 2.) SET RUN TIMES

1. Turn "TOP" dial to select INTERVAL. Select from every 1 hour to once a week.

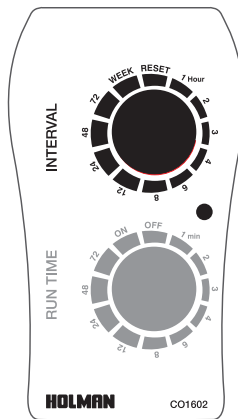

2. Turn "BOTTOM" dial to select RUN TIME. Select from 1min to 72mins.

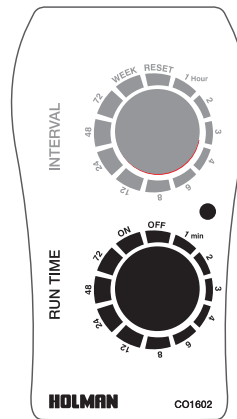


WHEN YOU FIRST SET YOUR TAP TIMER, WATERING WILL START AFTER THE FIRST INTERVAL

Manual Start

SETTING THE TAP TIMER TO START MANUALLY

1. Turn "TOP" dial to "RESET".

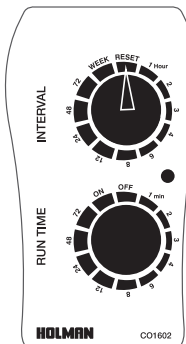


NOTE: Running a manual run time will change any program previously entered. Follow the programming steps above to setup required watering times.

Manual Start / Stop

SETTING THE TAP TIMER TO START MANUALLY


2. Turn "BOTTOM" dial to "ON".

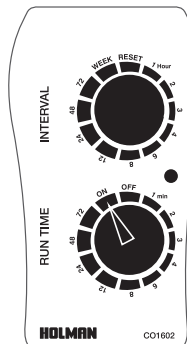

Manual Stop

SETTING THE TAP TIMER TO STOP MANUALLY

3. Turn "BOTTOM" dial to "OFF".

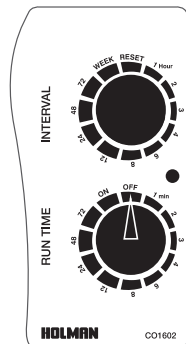

Red LED - Operating States


Red LED - OPERATING STATES as follows:

1. **SOLID:** Confirms program & each time auto program is changed
2. **FLASHING - Every 5 Seconds:** "ALL IS RUNNING CORRECTLY".
3. **FLASHING - Every 1 Second:** "BATTERIES NEED CHANGING".

Manual Start / Automatic Stop

SETTING THE TAP TIMER TO START MANUALLY AND STOP AUTOMATICALLY AFTER THE RUN TIME

1. Turn "BOTTOM" dial to the required Run Time. The Tap Timer will shut off automatically

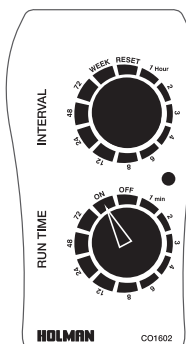

Fault Finding

1. Ensure your tap is turned on.
2. Ensure your battery is in good condition. **USE ONLY ALKALINE BATTERIES. 2 x AA**

Note: When the tap timer is not using an automatic program, it must be in the "OFF" position.

Turn the tap "OFF" when the tap timer is not in watering mode.

Clearing Memory

To clear an existing programme, remove the batteries & wait until the timer resets (This can take up to 5 minutes).

Alternatively, remove the batteries and initiate a manual start which will clear the memory immediately.

Technical Data

HOLMAN - 2 Dial Tap Timer

Product Code: CO1602.

Maximum Water Pressure: 800 kPA.

Battery: Use two standard AA ALKALINE battery.

Fluid: Only use cold water with NO added chemicals.

Warnings:

If the Low Pressure Tap Timer is going to be left for an extended period of time, please ensure the battery is replaced before doing so.

Do not use this device without the appropriate filter.



Warranty

Warranty: We will honour all statutory guarantees that this product is of acceptable quality. (including that it is fit for purpose)

HOLMAN Industries:
47 Walters Drive,
Osborne Park, WA 6017.
Ph: +61 8 9204 1011
www.holmanindustries.com.au

