



DIGITAL TAP CONTROLLER

Glossary

1. Inlet 3/4" BSP female thread with filter
2. Tap controller cover
3. Large LCD Screen
4. 6 Button Programming
5. Outlet 3/4" BSP male thread for 12mm hose adaptor (included)



Introduction

CO3005 - Digital Tap Timer

Thank you for purchasing this device, please read the operating instructions carefully to familiarise yourself with the features and modes of operation before using the Digital Tap Timer.

Tap Timer Installation

Make sure the washer is in place, then screw the tap timer to the tap. Turn it clockwise (hand tighten only).

NOTE:
There should be no need to use thread seal tape, as long as the tap seals onto the washer.

Battery Installation

- Turn the tap timer over to see the bottom of the unit.
- Remove the battery cover.
- Connect a 9V battery to the battery connector.
- Insert the connected battery and press on the battery cover.

NOTE: When changing a battery, the timer will hold program if you fit the new battery within 2 minutes.



 
NOTE: When changing the battery, make sure the battery compartment stays dry.

USE ONLY 9V ALKALINE BATTERIES




CO3005 **INSTRUCTION MANUAL**

1. Setting the Current Time

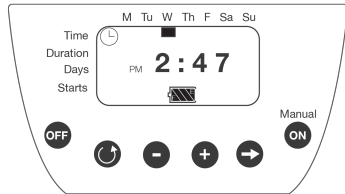


1. Press until the clock is displayed in the top left corner next to "Time". This means you are in "Time" mode.
2. Press and the hour will flash.
3. Press or to adjust the hour.
4. Press to select the minutes.
5. Press or to adjust the minutes.
6. Press to select the day (the black box will be flashing).
7. Press to reach the current day. Press to save the day.

 2. Setting the Duration

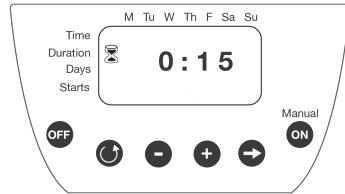


- "Duration" is the length of time you want the water to run for.
1. Press until the hour glass is displayed on the left next to "Duration". This means you are in "Duration" mode.
 2. The hour display will be flashing, press or to adjust the hour.
 3. Press to select the minutes.
 4. Press or to adjust the minutes.

 3. Setting the Watering Days

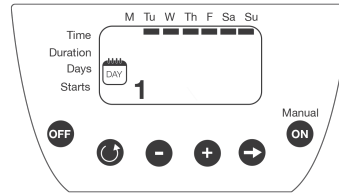


- "Days" is where you select what day(s) you want to water on.
1. Press until the calendar is displayed on the left next to "Days". This means you are in "Day" mode.
 2. Press and the black box under "M" will flash.
 3. Press to select that day, press to deselect that day.
 4. Press to scroll through the days, press if you need to reselect that day.
 5. Press to save the schedule.

 4. Setting the Start Times

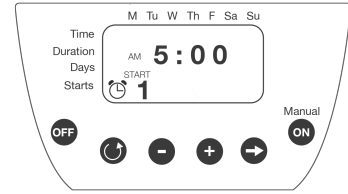

- "Starts" is the time of day you want your watering to begin. You can schedule up to 4 start times per day.
1. Press until the alarm clock is displayed in the bottom left corner next to "Starts". This means you are in "Starts" mode.
 2. Start "1" is the time you want your watering to first begin. Use or to adjust the hour.
 3. Press then or to adjust the minutes.
 4. Press to change to the next start time and repeat steps 2 & 3.
 5. To turn a start time "OFF" adjust the "hour" until it reads "OFF".

 Manual Operation

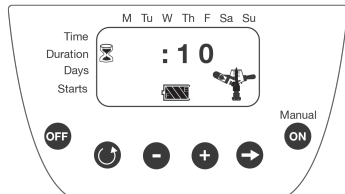

"Manual", allows you to manually turn on your tap timer and set a watering duration. **NOTE** - this will not effect your automatic schedule.

1. Press to begin manual watering. The preset time is 10 minutes. This will start automatically unless the duration is changed.
2. Manually set the duration time using or .
3. Once the watering duration has finished the tap timer will automatically end watering and return to the automatic schedule.

Suspending Operation

How to suspend the automatic scheduling
Use this feature when you want to temporarily suspend the automatic schedule.

This feature is generally used when it has been raining or during winter.

Suspension: Press and the sprinkler off icon will appear . The schedule is now suspended.

Cancel suspension: To resume the automatic schedule press .

Manual operation can still be used during suspension.

Troubleshooting

How to stop watering
To stop manual or automatic watering press .

Low battery warning
The battery indicator has 5 levels. 4 levels of battery and 1 flashing bar when the battery is flat. The tap timer will not water when the battery is in this mode. We advise to change the battery when it is down to 2 bars to ensure reliable watering.

The schedule will be retained in the tap timer for approximately 2 minutes while changing the battery.

Water not turning on
Ensure that the tap timer is not displaying if it is press until it disappears.

2 Year Replacement Guarantee

Holman offers a 2 year replacement guarantee with this product.

In Australia our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

As well as your statutory rights referred to above and any other rights and remedies you have under any other laws relating to your Holman product, we also provide you with a Holman guarantee.

Holman guarantees this product against defects caused by faulty workmanship and materials for 2 years domestic use from the date of purchase. During this guarantee period Holman will replace any defective product. Packaging and instructions may not be replaced unless faulty.

In the event of a product being replaced during the guarantee period, the guarantee on the replacement product will expire 2 years from the purchase date of the original product, not 2 years from the date of replacement.

To the extent permitted by law, this Holman Replacement

Guarantee excludes liability for consequential loss or any other loss or damage caused to property of persons arising from any cause whatsoever. It also excludes defects caused by the product not being used in accordance with instructions, accidental damage, misuse, or being tampered with by unauthorised persons, excludes normal wear and tear and does not cover the cost of claiming under the warranty or transporting the goods to and from the place of purchase. Should you suspect your product may be defective and need some clarification or advice please contact us directly:

1300 716 188 services@holmanindustries.com.au 11 Walters Drive, Osborne Park 6017 WA

If you are certain your product is defective and is covered by the terms of this warranty, you will need to present your defective product and your purchase receipt as proof of purchase to the place you purchased it from, where the retailer will replace the product for you on our behalf.

Irrigation Programming

- Press to end manual or automatic watering.
- Press to scroll through the programming modes.
- Press to decrease time or eliminate a day.
- Press to increase time or add a day.
- Press to select a function.
- Press to begin manual watering.

Maintenance

Remove the battery if the tap timer will not be used for a long period of time. The tap timer contains an internal filter which has to be removed and cleaned every few months. For longevity of the tap timer ensure to clean the filter on a regular basis.

HOLMAN INDUSTRIES
11 Walters Drive,
Osborne Park, WA 6017

Ph: 1300 716 188
www.holmanindustries.com.au

Technical Data

HOLMAN - Digital Tap Controller

Product code - CO3005

Maximum Water Pressure - 800 kPa
Minimum Water Pressure - 60 kPa

Flow Rate - 24L/min at 200 kPa

Power Source - 9 Volt Alkaline Battery
Power Consumption - 20 micro amps in standby mode.