

**HOLMAN**

# QuikDial™

4x Outlet Digital Tap Timer



[www.holmanindustries.com.au](http://www.holmanindustries.com.au)

**User Guide**

# Contents

Overview	3
Main Components	3
Additional Functions	4
Specifications	4
Setup	5
Battery Installation	5
Setup Process	5
Zone	6
Set Clock	8
Start Time	9
How Long (Watering Duration)	10
How Often (Watering Interval)	11
Operation	13
Automatic Watering	13
Manual Watering	14
Maintenance	15
Cold Weather	15
Batteries	15

**PRODUCT CODE: C06004**



**QuikDial™**

Our *QuikDial Tap Timers* have a simple and intuitive setup system that is quickly completed in 5 steps.

DIAL TO SELECT

ON OFF

WATER CONTROL

PRESS TO CONFIRM



SCAN FOR MORE INFO

# Overview

## Main Components

1. **ZONE 1** outlet
2. **ZONE 2** outlet
3. **ZONE 3** outlet
4. **ZONE 4** outlet
5. 20/25mm BSP tap nut inlet
6. Tap connection locking nut
7. Display
8. **ON/OFF**
9. Main dial
10. Battery compartment:
  - Requires 2× AA alkaline batteries only (not included)



# Overview (continued)

## Additional Functions

---

- i** Inactivity on your **QuikDial Tap Timer** controls for 6 seconds will return to the default system mode displaying the current time
- A** **Removing the AA batteries will reset all clock and schedule settings**
- i** To reset your **QuikDial Tap Timer**, remove the batteries and twist the main dial until the display is completely blank
- A** **For use with cold water only**

## Specifications

---

<b>Interval scheduling</b>	1, 2, 3, 6 or 12 hours, or 1-7 days
<b>Watering duration</b>	1-99 minutes
<b>Working pressure</b>	30-1200 kPa
<b>Maximum flow rate</b>	25 L/min
<b>Connections</b>	20/25mm BSP inlet / 20mm BSP outlet
<b>Working temperature</b>	3°C to 50°C
<b>Batteries</b>	2× AA alkaline (not included)

---


# Setup

## Battery Installation

1. Install 2× 1.5v AA alkaline batteries into your **QuikDial Tap Timer**, as indicated in the battery compartment [a]




- i** After installing the batteries, the display will flash and your **QuikDial** will make clicking noises as part of the start-up phase
- i** Once the start-up process is complete, the clock will display as follows, with the time separator flashing [b] and the battery indicated as full [c]

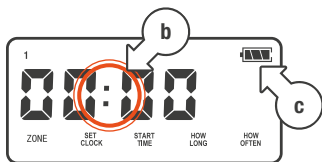

## Setup Process

 - i** Your **QuikDial** features a quick setup process across 5 key steps. Use the main dial to scroll through the main menu for each step




# Setup (continued)

## Zone


**i** This process is to select which zones will be watered as part of your schedule

1. Turn the main dial to select **ZONE** [a] in the main menu

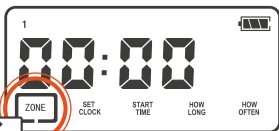

2. Press the main dial to edit zones

**i** The zone selector [b] will flash around **ZONE 1** and indicate as **ON** [c]

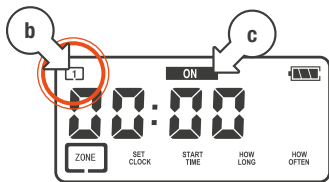


**i** By default, **ZONE 1** is **ON**, and **ZONES 2-4** are **OFF**

3. Press the main dial to toggle **ZONE 1 ON** or **OFF** as desired


**i** When a zone is turned **OFF**, the zone number [d] will disappear and the **OFF** indicator [e] will be displayed

**i** The zone selector [f] will remain flashing

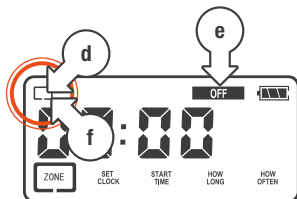

4. Turn the main dial to the next zone

**i** The zone selector [g] will flash around the next zone and indicate as **OFF** [h]

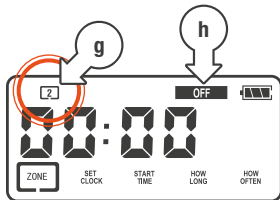


# Setup (continued)

## Zone (continued)

5. Press the main dial to toggle the zone **ON** or **OFF** as desired
6. Repeat [steps 4-5](#) for the remaining zones
7. After **ZONE 4** has been set to **ON** or **OFF**, turn the main dial one more step


- i** The zone selectors will flash around all zones [i], and the status of each zone will be indicated by their respective numbers being present (**ON**) [j] or missing (**OFF**) [k]

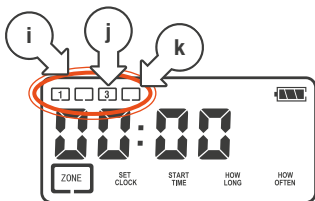

8. To confirm your zone settings, press the main dial

- i** Alternatively, to go back and change your zone settings, turn the dial another step and repeat [steps 3-7](#)

- i** Once your zones are confirmed, **ZONE** will flash in the main menu [i] and the active zones will be shown [m]

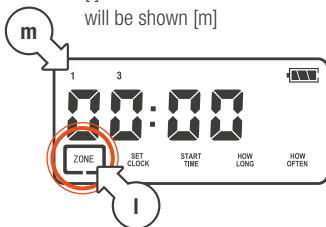


# Setup (continued)

## Set Clock

- i** This process is to set the system clock for your **QuikDial**
- i** Your **QuikDial** system time is always in 24-hour format (military time)


1. Turn the main dial to select **SET CLOCK** [a] in the main menu

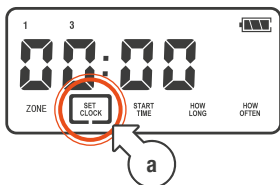

2. Press the main dial. The current *hour* [b] will begin flashing




3. Turn the main dial to adjust the *hour* to the current time
4. Press the main dial to confirm the current *hour*. The current *minute* will begin flashing [c]

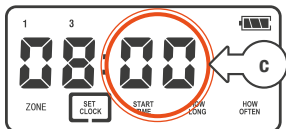

5. Turn the main dial to adjust the *minute* to the current time
6. Press the main dial to confirm the current *minute*

- i** **SET CLOCK** will flash again in the main menu [d], to indicate the system time [e] has been set

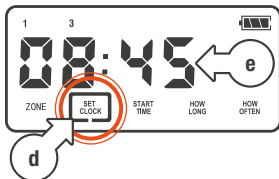



# Setup (continued)


## Start Time

**i** This process is to set the **START TIME** for watering of your active zones

**i** This **START TIME** is applied to all zones, but is only active on the zones that have been toggled **ON** in the previous instructions

**i** Refer back to [Zone](#) for more information on enabling or disabling zones

1. Turn the main dial to select **START TIME** [a] in the main menu

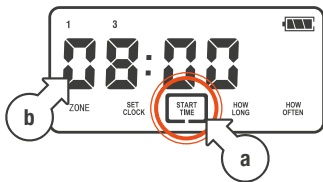

**i** This will display the current **START TIME** [b]. By default, this is set to **08:00** (8:00 am)

2. Press the main dial. The **START TIME** hour [c] will begin flashing



3. Turn the main dial to adjust the *hour* to the desired **START TIME**

4. Press the main dial to confirm the *hour*. The **START TIME** *minute* will begin flashing [c]




5. Turn the main dial to adjust the *minute* to the desired **START TIME**

# Setup (continued)

## Start Time (continued)


6. Press the main dial to confirm the *minute*

- i** **START TIME** in the main menu [d] will flash again, to indicate it has been set [e]

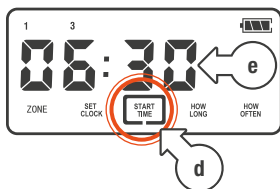


## How Long (Watering Duration)

- i** This process is to set the watering duration of your active zones
  - i** This duration is applied to all zones, but is only active on the zones that have been toggled **ON** in the previous instructions
  - i** Refer back to [Zone](#) for more information on enabling or disabling zones
1. Turn the main dial to select **HOW LONG** [a] in the main menu

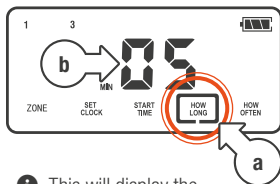

- i** This will display the current watering duration [b]. By default, this is set to 5 minutes
2. Press the main dial. The duration in minutes [c] will begin flashing

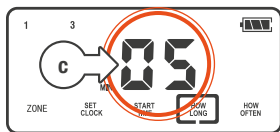


# Setup (continued)

## How Long (continued)

3. Turn the main dial to adjust duration as desired
4. Press the main dial to confirm the duration


- i** **HOW LONG** in the main menu [d] will flash again, to indicate the duration has been set [e]

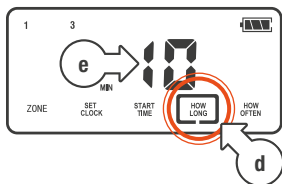

## How Often (Watering Interval)

- i** This process is to set the interval time between watering sessions of your active zones
- i** This interval is applied to all zones, but is only active on the zones that have been toggled **ON** in the previous instructions
- i** Refer back to [Zone](#) for more information on enabling or disabling zones


1. Turn the main dial to select **HOW OFTEN** [a] in the main menu
- i** This will display the current watering interval [b]. By default, this is set to 1 day

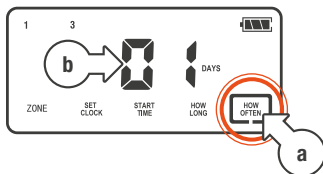

# Setup (continued)


## How Long (continued)

2. Press the main dial. The interval [c] will begin flashing

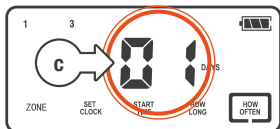

3. Turn the main dial to adjust the interval length in **DAYS** from 1 to 7


- i** For shorter watering intervals in **HOURS** [d], turn the main dial beyond 7 days. The interval will now show as 1 hour

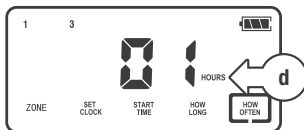


- i** Keep turning the main dial to adjust the watering interval in **HOURS**

- i** Hourly watering intervals are available in 1, 2, 3, 6 or 12 hours

- i** To go back to setting the interval in **DAYS** [e], keep turning the dial beyond 12 hours. The interval will return to 1 day

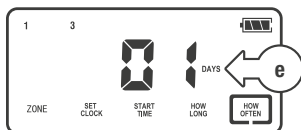

4. With the desired interval time showing, press the main dial to confirm



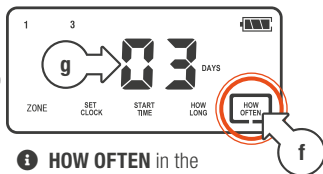


- i** **HOW OFTEN** in the main menu [f] will flash again, to indicate the interval has been set [g]

# Operation

## Automatic Watering


1. For automatic watering, ensure **ZONE**, **SET CLOCK**, **START TIME**, **HOW LONG** and **HOW OFTEN** have all been set correctly as per the previous instructions
2. After a period of inactivity on your **QuikDial** controls, the set watering schedule will be active in the background as per your confirmed settings
  - i** In this state, your **QuikDial** display will cycle between the current time [a] and the amount of time left before your **NEXT** watering session [b]
3. When the current interval time [b] lapses, the zones will start watering in sequential order
  - i** During watering, the sprinkler animation [c] will be active, the current zone [d] will flash, and the remaining watering time [e] will also flash as it counts down
  - i** Additional zones scheduled for watering will also show [f]

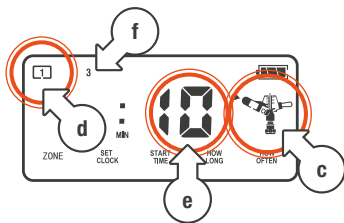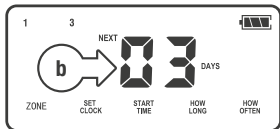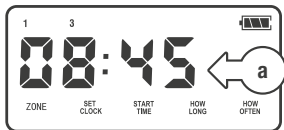

# Operation (continued)


## Manual Watering

1. For manual (instant) watering, press **ON/OFF**
2. The zone selector [a] will flash. Twist the main dial to select a zone
4. Once watering, the remaining time [e] will also flash to indicate it is adjustable
5. Turn the main dial to adjust the watering time as desired

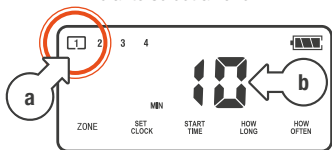

3. Press the main dial to water immediately for the pre-set duration [b]. By default, this is 10 minutes
  6. After a short period of time, the remaining watering time will stop flashing to indicate it has been set
- i** The minimum watering time is 1 minute
  - i** The maximum watering time is 99 minutes
6. To stop watering before the remaining time has lapsed, press **ON/OFF** and your **QuikDial** will return to the default display

- i** During watering, the sprinkler animation [c] will be active, and the current zone [d] will flash

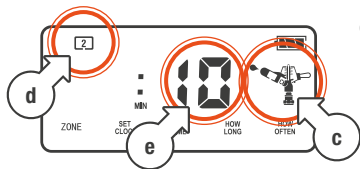

- i** If the remaining time stops flashing before you were able to adjust it, press **ON/OFF** to stop watering, and restart the manual watering process from [Step 1](#)

# Operation (continued)

## No/Suspended Watering Mode

---

1. To stop all automatic watering, press the **Menu dial** for 3 seconds
2. The display will enter **non watering mode** [a]
3. To return to scheduled automatic watering, press the **Menu dial** for 3 seconds
4. The **non watering icon** will disappear and your automated watering will continue



# Maintenance

## Cold Weather

---

- i** Your *QuikDial* should be removed from the tap and stored away during winter
- ⚠** **Keep your tap timer out of freezing conditions as this can damage internal components**

## Batteries

---

- i** Remove batteries from your *QuikDial* during periods of non-use—this will erase all settings
- ⚠** **Battery leakage can cause corrosion and damage to your *QuikDial***
- ⚠** **Do not mix old and new batteries**
- ⚠** **Do not use rechargeable batteries**

### Need help? Just ask!

The Holman website has a host of additional information on features. Head to [support.holmanindustries.com.au](https://support.holmanindustries.com.au) for more tips, tricks and support content.

If you still need help, feel free to email our friendly Customer Service team at [support@holmanindustries.com.au](mailto:support@holmanindustries.com.au) or call at 08 9416 9999.



SCAN FOR MORE INFO





Thanks for being a  
#SMARTGARDENER

We really appreciate having you as a customer, and would like to say thank you for choosing us.

We recommend registering your new product on our website. This will ensure we have a copy of your purchase and activate an extended warranty. Keep up to date to with relevant product information and special offers available through our newsletter.

[www.holmanindustries.com.au/product-registration/](http://www.holmanindustries.com.au/product-registration/)



# HOLMAN

For the #SMARTGARDENER   

Copyright © 2023 Holman Industries