

HOLMAN

Wi-Fi Adjustable
Spotlight Value Pack



www.holmanindustries.com.au

User Guide

iOS is a trademark of Apple Inc. Android is a trademark of Google LLC. The Android robot is reproduced or modified from work created and shared by Google and used according to terms described in the Creative Commons 3.0 Attribution License. All other content is Copyright © Holman Industries 2023

PRODUCT CODE: WXSL001

Contents

Overview	4
Package Content	4
Setup	5
Preparation	5
Pairing	8
Key Functions	11
Power on/off	11
Bulb – light mode/dimmer	12
The White Feature	13
Pallette – Scenes	14
Music	15
Plan (timer)	16
Troubleshooting	20
My lights won't flash red for pairing mode	20
To remove the device from Holman Home,	20
Specifications	21
Warranty	23


Overview

Package Content

1. 1 × String of 9 RGB Wi-Fi, **Adjustable Spotlights** [a].
IP65 – lights are integrated to the cable, no further cable connection points after the inline switching adaptor
2. 1 × **Inline Switching Adaptor** [b], output 12VDC, IP67
3. 1 × **Plug** [c], input 240V AC – must be installed in a waterproof power point (GPO) or protected area (i.e this is not IP65)

⚠ No modification or addition to the light configuration is possible

- i** 440mm between each light [d]
- i** 3m from Adaptor to first light [e]
- i** Distance between lights with cable in brackets 440mm
- i** Distance between lights without cable in brackets 570mm

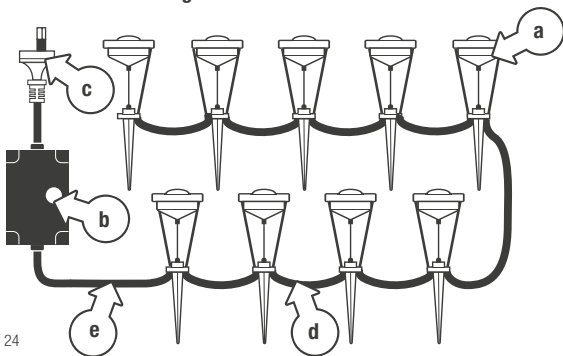



Setup

Preparation

1. Ensure the power point (GPO) is within 3m of the first light, the power point needs to be in a protected location (or use a waterproof outdoor power point)
2. The inline switching adaptor is able to be up to 90cm from the power point, you will then have a further 3m distance to the first light
4. Plug the light string into the **Inline Adaptor** – please check the O-Ring [b] is in place before connecting and screwing down the protective cover

⚠ This mini spotlight chain is not extendable or adjustable

3. Unpack the cables from their ties and check there is no damage to your lights or cables before plugging the string in [a]

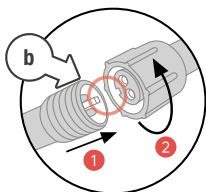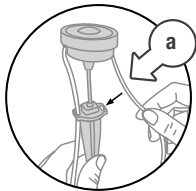


5. Turn on the power and observe the lights are all working, they may be a solid colour or flashing red
6. Red flashing indicates the lights are in pairing mode
7. If the lights are a solid colour, please turn the power point on/off/on/off/on to force the lights into pairing mode (red flashing)

Setup (continued)



Preparation (continued)

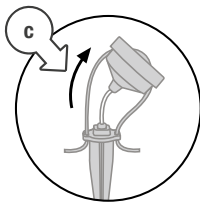- When placing the lights in the garden, you can bend the 'neck' of the **Adjustable Spotlights** [c] to give the light direction. This can be used for wall washing or other effects. No great force is needed, a gentle hand can easily bend the neck with minimal effort





Setup (continued)



Installing Holman Home

1. Download **Holman Home** to your mobile device via the  **App Store** or  **Google Play**



2. Open **Holman Home** on your mobile device
 -  You may be prompted to allow notifications—the app can still function if you choose to opt out
3. Tap **SIGN UP**
4. Read our User Agreement and Privacy Policy and tap **AGREE** if you wish to proceed
5. Follow the prompts to register a **Holman Home** account with your email address

 **Ensure your country details are correct at this stage**


-  You must allow the '**Discovering Nearby Device**' permission (or **Bluetooth**® permission, depending on your phone operating system) – this allows **Bluetooth**® mesh products to be added into **Holman Home**
-  You may be prompted to allow access to your location. This allows the app to show weather information-it will still function if you choose to opt out

Setup (continued)

Pairing

1. Pairing of the mini spotlights is via **Bluetooth® Mesh**, please ensure you have allowed the **Bluetooth® (iOS)** or **Nearby Devices (Android)** permission

2. These lights will flash white/fast to indicate they are ready to pair (default/pairing mode)
3. Tap **'Add Device'** from the **Holman Home** Home screen, you will see the mini spotlights appear under **'Discovering Devices'**
4. Press **'Add'** [a] to commence pairing

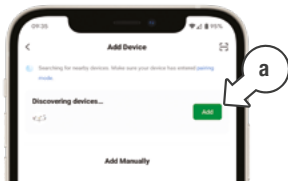

5. If this is your first **Holman Home** Wi-Fi device, enter/review your Wi-Fi name and password, then tap next




6. If this is not your first device, your Wi-Fi name and password will appear pre-filled – review the details and tap next


Setup (continued)

Pairing (continued)


- When you see the blue circle [b] appear on the **'Add Device'** screen please tap this to commence pairing

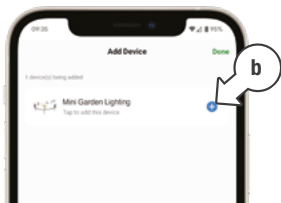

- After 30 seconds to 1 minute the lights will be successfully added
- Tap **'Done'** to complete pairing

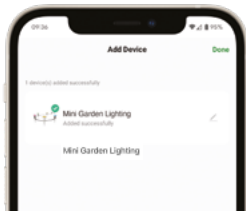

- The lights will now load and you'll need to edit the number of lights (Default is 30 lights)
- You can delete this using your keypad and then type 9

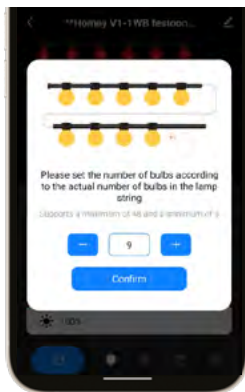

- Tap **'Confirm'** to save the bulb number

Functions

Key Functions

i Menu options at the bottom of the home screen

 
1. **Power on/off**
2. **Bulb - Dimmer - RGB mode, colour or white selection**
3. **Palet - Scenes**
4. **Music**
5. **Plan (timer)**



Power on/off

i Turn the lights on and off manually

i This is also available on the home page of **Holman Home** [a]




Functions

Bulb – light mode/dimmer

- ✔ **Menu** – (right of screen top to bottom)
- ✔ **Squiggle** – individual light selection [b]
- ✔ **Tipping bucket** – all lights one colour [a]
- ✔ **Eraser** – take a light out of the system [c]

Tipping bucket – all lights one colour

- i** Tap the tipping bucket to select all lights
- i** Tap the colour selector to choose a colour
- i** Use the brightness slider to dim the lights as needed [d]

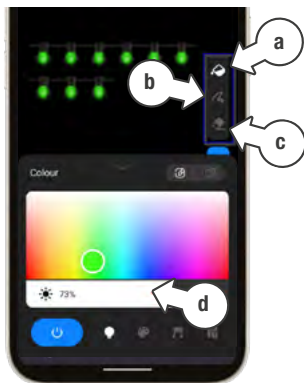


Functions

Bulb – light mode/dimmer (continued)

Squiggle - individual light selection

- i** Tap the squiggle
- i** Tap the colour selector to choose a colour, then tap the light to colour it
- i** Repeat to colour each light as you prefer
- i** Brightness applies to the entire string – use the slider to adjust this as needed

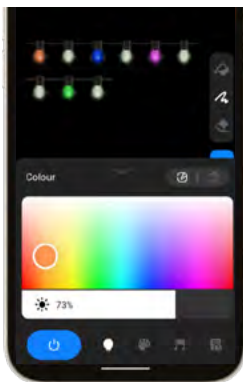

The White Feature

- i** A white feature light (created from blended RGB spectrum) is available in the colour selector, select the fade out at the top of the colour selector to access this
- i** The RGB blend does not change by selecting varying areas from the colour selector (i.e selecting the fade above yellow does not give warm white), this is a cool white feature
- i** This is available as an individual selection, or for all the globes as a group

Functions (continued)

Bulb – light mode/dimmer (continued)

Other features – paint brush (palette) or pixel mode, hide selector

- i** Tap paint brush to have a colour palette to choose from
- i** Tap the pixel to have squares as colour/white selection
- i** Tap the down facing arrow head to hide the colour selector, tap the line to restore [a]



Palette – Scenes


- i** Tap to select a **Scene**
- i** Use the slider at the bottom of the page to change the speed of the colour changes/flashing



Functions (continued)

Music

- ❗ Requires audio recording permission, as this uses the device microphone to work
- ❗ Lights will change colour (dance) to the beat

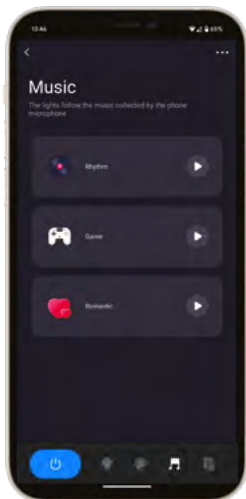


Functions (continued)


Plan (timer)

i To set a timer, select '**Plan**'. There are 2 options available


i Countdown, single use countdown timer

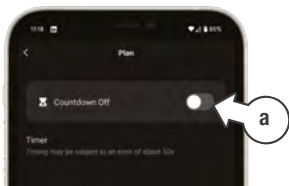


i Toggle on the countdown [a], set the countdown time (scrolling wheel), tap '**Confirm**' [b] to save

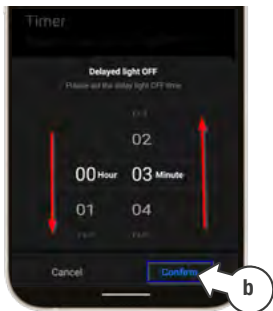

i The countdown will now start, and be shown on the plan page

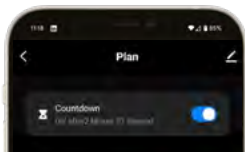

i To set a **Timer**, tap the circle [c] to the bottom right of the page

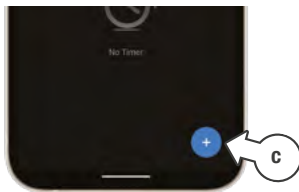


i You will need a timer for on and one for off – you can set more up for different days of the week. It is possible to have a different timer for each day of the week

Functions (continued)


Plan (timer) (continued)

- i** AM/PM selection is via the scroll wheel [d] when setting the time
- i** Set the time you want the lights to come on, by scrolling the wheel for hours/minutes

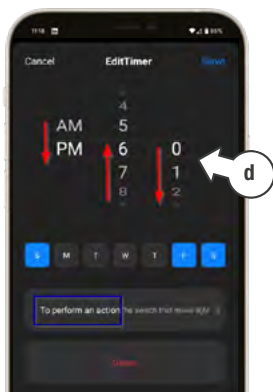

- i** Set the days of the week by tapping the box – blue is a scheduled day, black days don't apply to this timer

- i** 'To perform an action' is the state the lights will be in for this timer – close is the default and this is 'off'
- i** Tap to open the action selection screen, and for an on time, select 'The switch that move light'

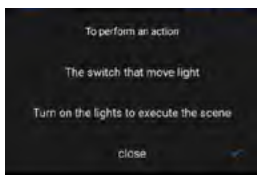

Functions (continued)

Plan (timer) (continued)


i The colour selection screen allows you to set a colour and brightness for the system

! **There is no individual bulb selection possible in the timer settings. Colour and brightness are the only options**

i Tap save once you've set your preference


If you prefer a scene to be used, select '**Turn on the lights to execute the scene**' – this will take you to the scene selection screen.

Repeat the process to set an off time (**Close**)

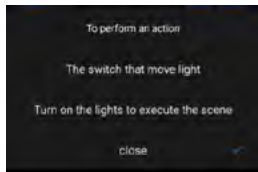

i The completed timer will now be shown on the '**Plan**' screen

i You can toggle a timer off by sliding the switch to the left [e]

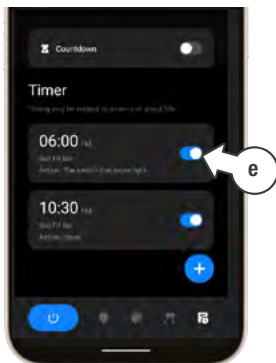

Functions (continued)

Plan (timer) (continued)

- i** To edit the timer, open it by tapping the box, and then change it as needed
- i** If you wish to remove the timer tap **Delete** [f]



Troubleshooting


My lights won't flash red for pairing mode

- i** To get the lights to change from solid to flashing, turn the power on and off as follows: on/off/on/off/on

Please allow 10-20 seconds for the string to respond to the on/off pattern after the final on – they will then start flashing

To remove the device from Holman Home,

- i** Tap the pencil at the top right of the screen, then **'Remove Device'** at the bottom of the screen [a]
- i** You'll have the option to **'Disconnect'**, or **'Disconnect and wipe'**:
- ✔ Disconnect is a good idea for something like a modem change, or moving house
- ✔ Disconnect and wipe will remove all settings from the lights (and cloud) and restore factory defaults

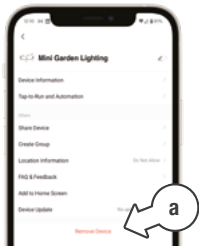

Need help? Just ask!

The Holman website has a host of additional information on features. Head to support.holmanindustries.com.au for more tips, tricks and support content.

If you still need help, feel free to email our friendly Customer Service team at support@holmanindustries.com.au or call at **08 9416 9999**.



SCAN FOR MORE INFO

Specifications

Adjustable Spotlight

Input	240V AC
Output	12V DC
Light Output	0.5W per light
Pack Output	5W total
Size	Ø 60mm
Height	180mm
Colour	RGBW Multi
Waterproof Rating	IP65
Housing	Plastic

Warranty

2 Year Replacement Guarantee

Holman Industries offers a 2 year replacement guarantee with this product.

In Australia our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

As well as your statutory rights referred to above and any other rights and remedies you have under any other laws relating to your Holman product, we also provide you with a Holman guarantee.

Holman Industries guarantees this product against defects caused by faulty workmanship and materials for 2 years domestic use from the date of purchase. During this guarantee period Holman Industries will replace any defective product. Packaging and instructions may not be replaced unless faulty.

In the event of a product being replaced during the guarantee period, the guarantee on the replacement product will expire 2 years from the purchase date of the original product, not 2 years from the date of replacement.

To the extent permitted by law, this Holman Replacement Guarantee excludes liability for consequential loss or any other loss or damage caused to property of persons arising from any cause whatsoever. It also excludes defects caused by the product not being used in accordance with instructions, accidental damage, misuse, or being tampered with by unauthorised persons, excludes normal wear and tear and does not cover the cost of claiming under the warranty or transporting the goods to and from the place of purchase.

Should you suspect your product may be defective and need some clarification or advice please contact us directly:

1300 716 188

support@holmanindustries.com.au

**11 Walters Drive,
Osborne Park 6017 WA**

If you are certain your product is defective and is covered by the terms of this warranty, you will need to present your defective product and your purchase receipt as proof of purchase to the place you purchased it from, where the retailer will replace the product for you on our behalf.



Thanks for being a
#SMARTGARDENER

We really appreciate having you as a customer, and would like to say thank you for choosing us.

We recommend registering your new product on our website. This will ensure we have a copy of your purchase and activate an extended warranty. Keep up to date to with relevant product information and special offers available through our newsletter.

www.holmanindustries.com.au/product-registration/



HOLMAN

For the #SMARTGARDENER   

Copyright © 2023 Holman Industries