



HOLMAN

Should you have any questions about this product or its operation please telephone our customer service helpline on 1300 716 188.

HOLMAN offer a 3 year replacement warranty from the original date of purchase.

HOLMAN offer no guarantee or compensation for subsequent damage or waste of water.

It is the responsibility of the user to check that the product is always operating satisfactorily.

To claim warranty the product MUST be returned with a copy of the original receipt.

We will honour all statutory guarantees that this product is of acceptable quality (including that it is fit for purpose). Product images may change without notice.

HOLMAN

For the #SMARTGARDENER   

Head Office / Service

11 Walters Drive, Osborne Park WA 6017
Ph: +61 8 9416 9999 Fax: +61 8 9416 9920
service@holmanindustries.com.au
www.holmanindustries.com.au

Copyright 2018 Holman Industries



Product Code: RGB1263

1,2,3+
MODULAR
GARDEN BED SYSTEM



RAISED GARDEN BED

600mm x 1200mm x 300mm





Instruction Manual

Contents List



- A** 14x 600mm x 150mm side panels
- B** 6x 300mm corner posts
- C** 6x Corner post caps
- D** 2x Twista™ spray nozzles
- E** 1x 12mm snap-on adaptor
- F** 1x 4mm barb to 20mm BSP adaptor
- G** 1x 4mm barbed tee
- H** 1.2m x 4mm micro poly tube

Installation

1. Location is important when growing plants in a raised garden bed. Depending on the type of plants and the amount of sun light exposure required, choose a full or part sun location for your garden bed.
2. Slot the panels into the pillars with the tongue facing up.
3. Install the caps on top of the pillars.

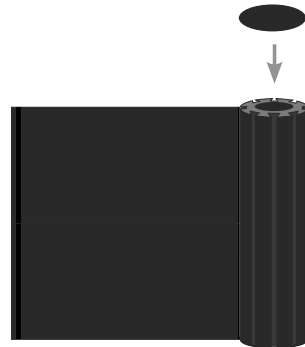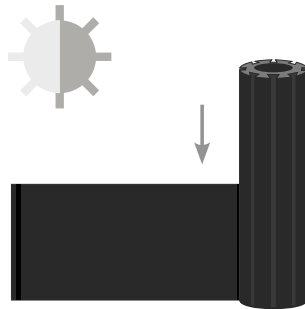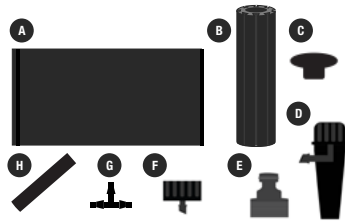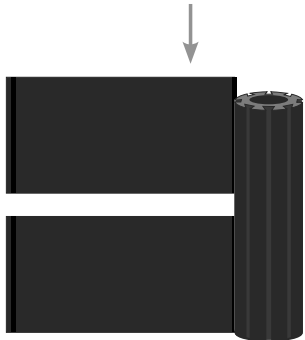

4. Slot two panels between the centre posts to stabilise the garden bed.
5. Optional: place weedmat into the raised garden bed, with the edges going up the height of the wall panels. This will ensure minimal soil escapes when watering, and is useful when planting on a solid surface, like bricks.
6. Fill the raised garden bed with potting mix and plant your herbs, flowers or vegetables.
7. Take advantage of the unlimited options of connecting multiple raised garden bed kits together and extend your garden. Simply slide additional panels into the existing module.

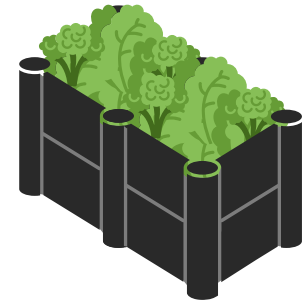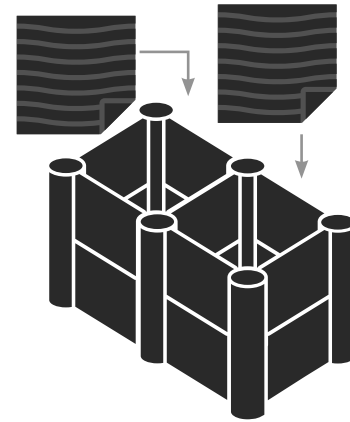

Irrigation

1. Attach the 4mm poly tube to the Twista™ Spray.
2. Cut off the length of poly tube required for the second raised garden bed. Using the tee connect the poly tube and the second Twista™ Spray.
3. Attach the barb to BSP adaptor to the other end of the poly tube.
4. Lie the poly tube down on your garden bed.
5. Screw on the snap-on adaptor to the barb to BSP adaptor and connect your garden hose.
6. For automatic watering attach a Holman Tap Timer.

